

Viking Door Chime MODEL: LA-107 SERIES

• For use with either a transformer or batteries

LOCATION

TRANSFORMER: Mount a 10 or 16-volt transformer to a conveniently located junction box. Attic location is not recommended. For best performance, a 16 volt transformer is recommended.

PUSHBUTTON: The chime is designed for two-note

operation. Select pushbutton locations at front and rear (or side) doors. Do not use lighted pushbuttons with battery-operated chime.


NEW INSTALLATION

INSTALLING TRANSFORMER

Disconnect house power until installation is complete. All wiring must comply with local codes.

1. Use a NuTone transformer (16 volts, 10 watts).

- 2. **Refer to Figure 1.** Mont transformer to a conveniently located junction box. Do not mount transformer in attic.
- 3. Use approved wire connectors to connect supply wires to transformer leads: white to white; black to black.

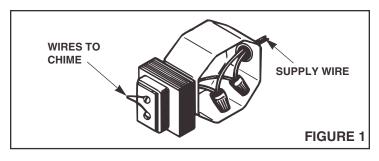

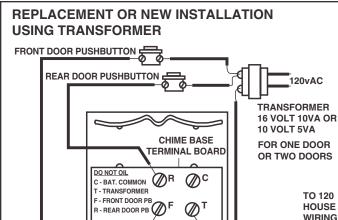


FIGURE 2


INSTALLING THE WIRING


- 1. Use standard bell/chime wire (20 gauge, two-conductor).
- 2. Run wires as shown in Figure 2 for installation using transformer.
- 3. Run wires as shown in Figure 3 for installation using batteries.

MOUNTING CHIME BASE

Refer to Figure 4.

- 1. At chime location, cut a 1" diameter hole (for pushbutton and transformer wiring) in the wall.
- 2. Pull wiring through two holes in chime base.
- 3. Use two provided screws to mount chime base to wall. Make sure keyhole mounting hole is at top.

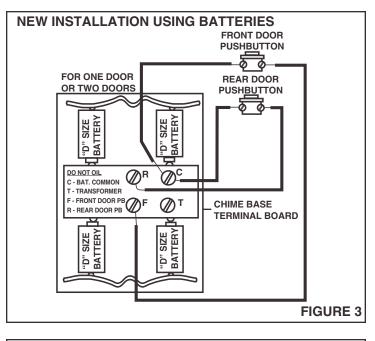

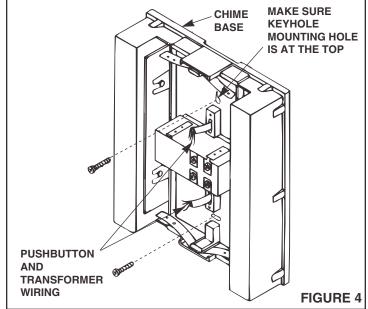


WIRING CONNECTIONS

- 1. Use wire nuts to make connections. Insulate all connections with electrical tape.
- 2. INSTALLATION USING TRANSFORMER. Refer to Figure 2. Connect pushbutton and transformer wires to terminal screws marked Front, Transformer, and Rear.
- INSTALLATION USING BATTERIES. Refer to Figure 3. Connect pushbutton wires to terminal screws marked Front, Common, and Rear.

WIRING HINTS

 1. Carefully fasten wiring to wall studs and ceiling joists. Avoid short circuits caused by staples or clops cutting through the wiring's insulation.



- Loop wire around terminal screws.
 When connecting more than one wire
- to a single terminal screws, twist the wires together before looping them around the terminal screw.
- 4. Make sure all terminal screws are tightened securely.

BATTERY INSTALLATION


- 1. Install four (4) "D" size batteries as shown in Figure 4.
- 2. For longer life, alkaline batteries are recommended.

ATTACHING CHIME COVER

- 1. Place cover over base.
- 2. Refer to Figure 5. Secure cover by placing mounting tab into slot at back of base.

REPLACEMENT INSTALLATION

- 1. Turn off house power until installation is complete.
- Remove cover from existing chime and disconnect wires from terminal screws. Label all wires (Front, Transformer, Rear) as you remove them. NOTE: Any additional wires (for example: common or side) should be individually capped with wire nuts or sealed with electrical tape and pushed back into the wall cavity. These wires are not needed.
- 3. Remove existing chime base from wall.
- 4. Pull wires through holes in new chime base.
- 5. Use provided screws to mount base to wall.
- 6. Connect wires to terminal screws marked Front, Transformer, and Rear on the chime base.
- 7. Place chime cover securely over the base.
- 8. Restore house power to chime.

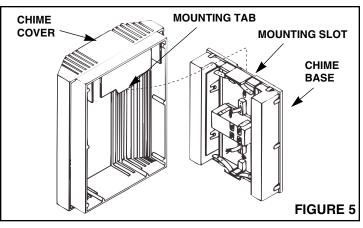

NuTone	
One Year Limited Warranty	
WARRANTY OWNER: NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workn of one (1) year from the date of original purchase. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.	
During this one year period, NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal us: THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS OR TUBES, FILTERS, DUCT, ROOF CAPS, WALL CAPS AND OTHER A FOR DUCTING. This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence improper maintenance or repair (other than by NuTone), faulty installation or installation contrary to recommended installation instructions.	ACCESSORIES
The duration of any implied warranty is limited to the one year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.	
NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties. WARRANTY SERVICE: To qualify for warranty service, you must (a) notify NuTone at the address stated below or telephone 1/800-543-8687, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.	
Date of Installation Builder or Installer	
Model No. and Product Description	
IF YOU NEED ASSISTANCE OR SERVICE: For the location of your nearest NuTone Independent Authorized Service Center: Residents of the contiguous United States Dial Free 1-800-543-8687 Please be prepared to provide: Product model number • Date and Proof of purchase • The nature of the difficulty Residents of Alaska or Hawaii should write to: NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio 45227-1599. Residents of Canada should write to: Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario, Canada L5T 1H9.	
	Rev. 03/2001