

Fluorescent Highbay "T5K" & "T8K" Installation Instructions



Important Safeguards:


WARNING – When using electrical equipment, basic safety precautions should always be used including the following: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Toggle Kit

READ AND FOLLOW ALL SAFETY INSTRUCTIONS



Mark means lamp contains mercury. Follow disposal laws. See www.lamprecycle.org

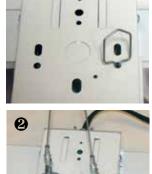

• AccuLite Cat. # 10' cable: **TE-YT-10** AccuLite Cat. # 20' cable: **TE-YT-20**


1 Insert Toggles

Remove knockouts for 1/4" round holes and insert the four toggles (do not use the slotted holes) as illustrated.

Attach Hooks to the Toggles

6 Attach the Gripper to the Cable

• Push the tail end of the cable through one channel of the gripper.



- Thread the tail of the cable around (or through) the anchor point.
- Loop the cable over the supporting structure.



• Pass the tail end of the cable through the other channel of the gripper.

6 Adjust Cable Length

Quick Hanger

- AccuLite Cat. # 3' chain: T5E-SH-3 AccuLite Cat. # 5' Chain: T5E-SH-5

• Insert through appropriate holes in the housing as illustrated



• Attach mounting kits or accessories. See right.

3 Remove Protective Film from Reflector

4 Install Lamps



6 Check Voltage

- Open appropriate knockout and connect to proper voltage.
- **7** Replace Parts
- Replace any parts removed during installation.



SAVE THESE INSTRUCTIONS

